

MECCANO X SERIES CLOCKWORK MOTOR

Instructions


Before winding the Motor, oil the bearings and gears with Meccano Oil.

See that the Brake Lever "A" is raised to the "on" position.

To wind, press key "B" on to the driving shaft to its fullest extent, and wind clockwise only, as indicated by the arrow. Do not turn the key backwards.

To start the Motor release brake lever "A".

When using the Motor to drive models the extra pulley supplied with the motor should be screwed on to the axle rod and locked in position by means of two nuts, one on each side of the pulley.

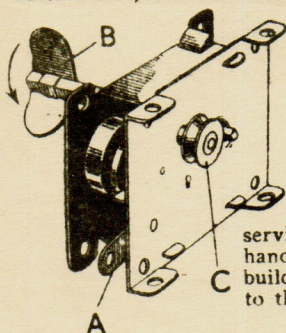

The rubber band should be passed over the two pulleys, and will then serve as a driving belt.

If the above instructions are carried out and the Motor oiled at frequent intervals, it will give excellent service, and will greatly enhance the joys of model-building by giving movement to the models.

MECCANO LIMITED, OLD SWAN, LIVERPOOL.